


# BENCH ANCHOR KIT INSTRUCTIONS WOOD OR NON-CONCRETE

## Included Components

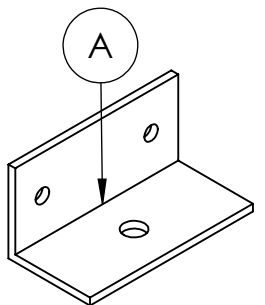


**4 qty.**  
Bench Anchor



**8 qty.**  
#8 x 1-5/8" Sq Head Screw





**4 qty.**  
#12 x 2" Sq Head Screw



**4 qty.**  
Sleeve Anchors  
(Concrete Installation)


## REQUIRED TOOLS NOT INCLUDED

- Power Drill
- #2 Square bit

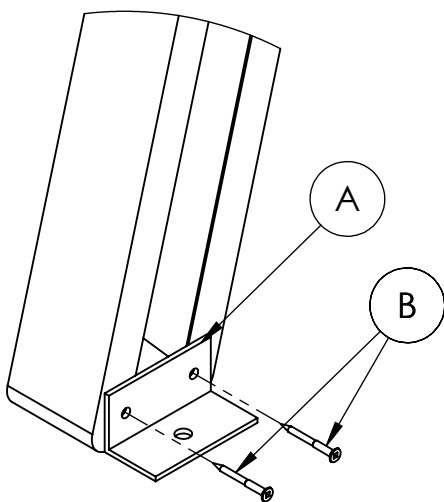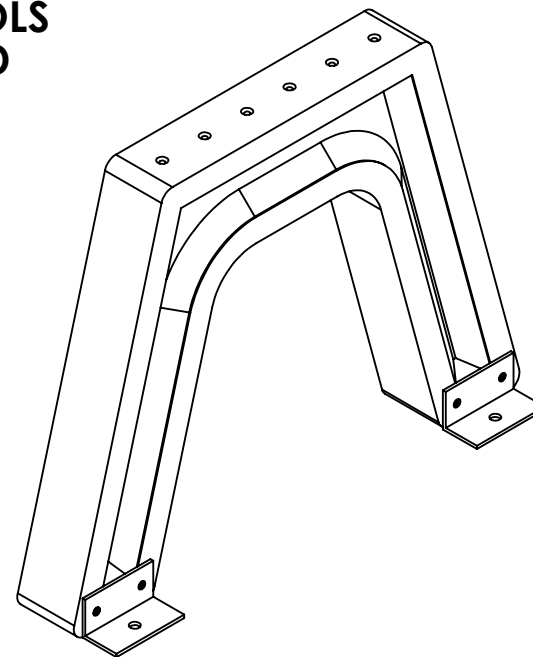

### Step A

Position bench with anchor (A) in place.  
Mark position of anchors on bench leg  
and mounting surface.  
Screw 1-5/8" screws (B) into bench leg.

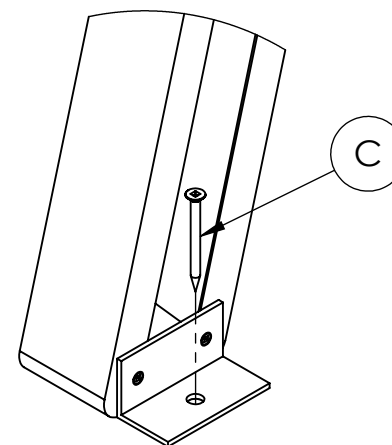


### Step B

Screw 2" screws (C) into mounting  
surface.

# BENCH ANCHOR KIT INSTRUCTIONS CONCRETE


## REQUIRED TOOLS NOT INCLUDED

- HAMMER DRILL
- 5/16" MASONRY DRILL BIT
- HAMMER
- 7/16" SOCKET OR WRENCH

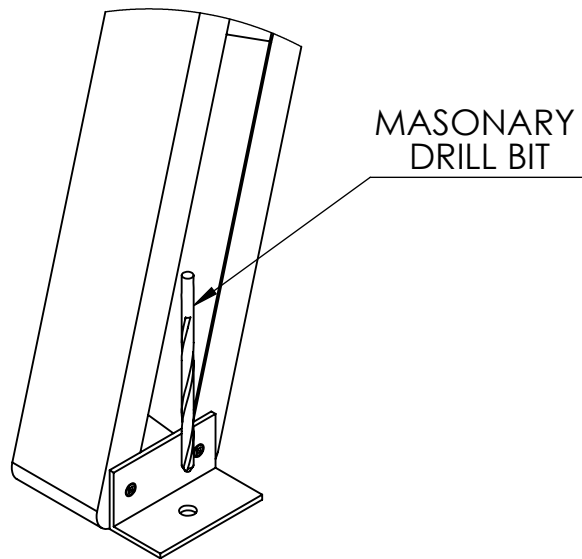

### Step C

Using a hammer drill and 5/16" masonry bit, drill a hole for each bench anchor in the concrete.

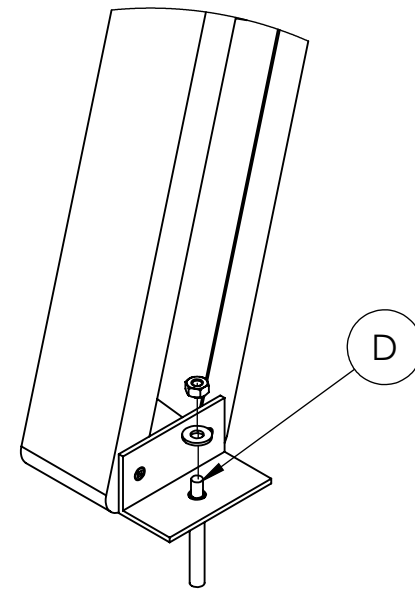

### Step D

Insert a sleeve anchor into the hole. You may need to tap the anchor down with a hammer to seat the bolt. Tighten the nut to engage the anchor mechanism. If desired, the exposed threads can be cut off when tight.