

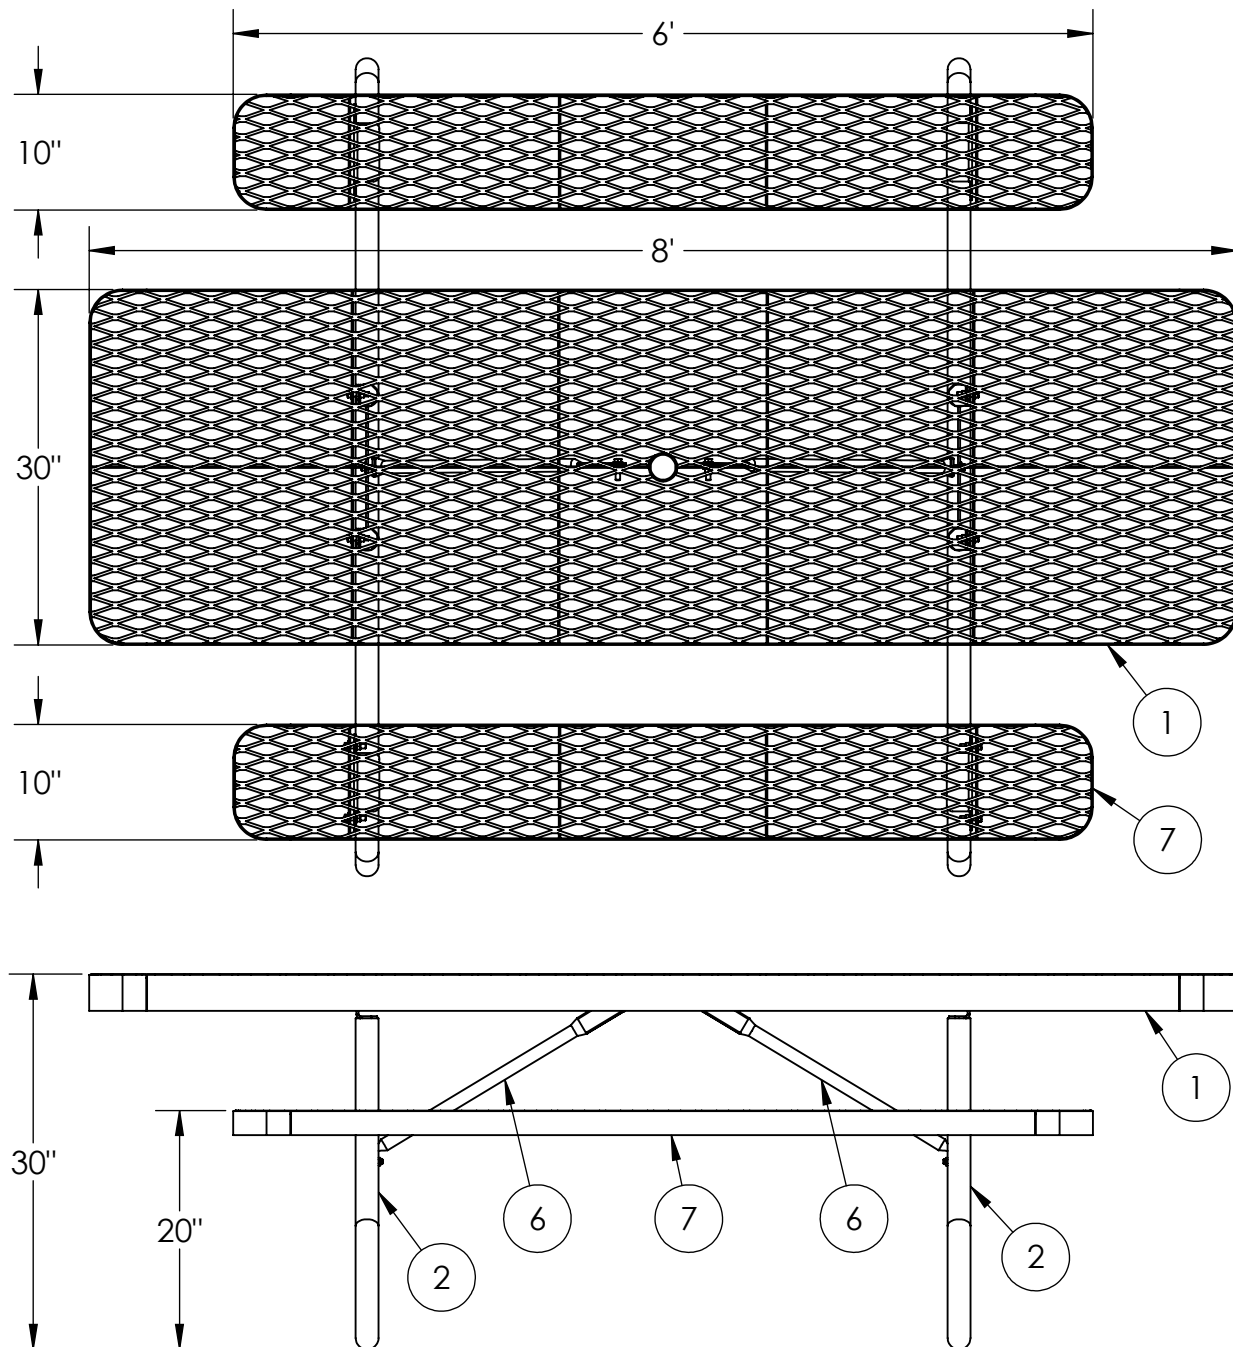


8' Accessible Free Standing Picnic Table

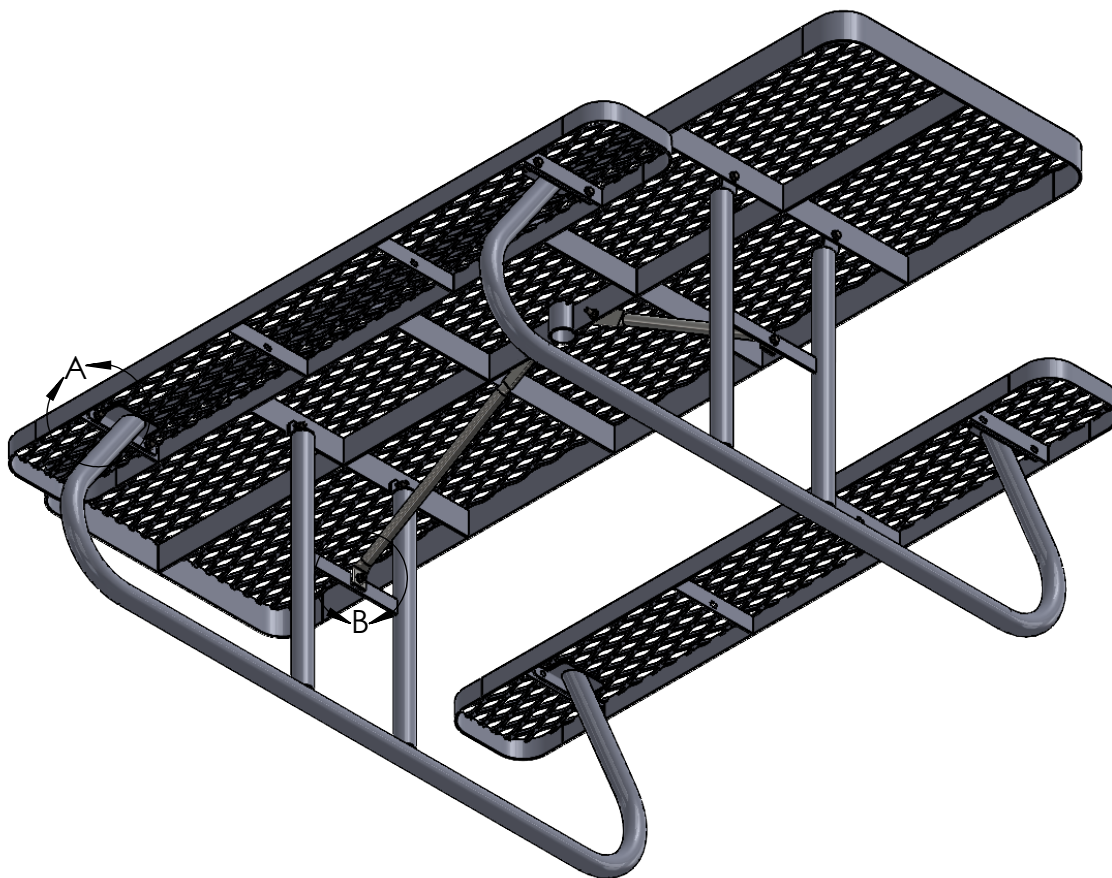


ITEM NO.	DESCRIPTION	QTY.
1	8' Champion Access Table Top	1
2	Free Standing Table Stand For Seats	2
3	3/8"x1-1/2" SS Hex Bolt	12
4	3/8" SS Flat Washer	24
5	3/8" SS Nylock Nut	12
6	TABLE BRACE	2
7	6' Champion Seat/Back (QS)	2


8' Accessible Free Standing Picnic Table

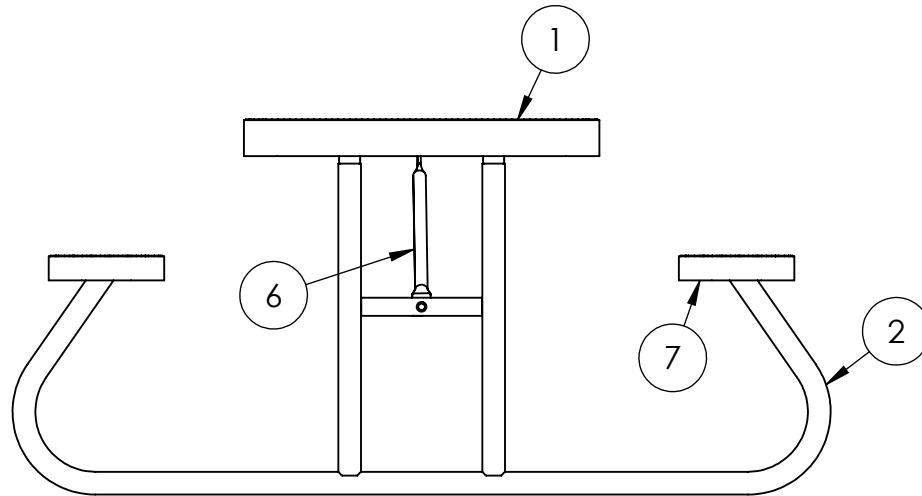

8' Accessible Free Standing Picnic Table

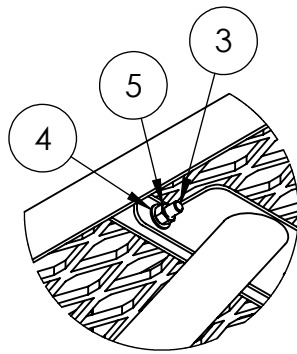

DETAIL A
SCALE 1 : 6

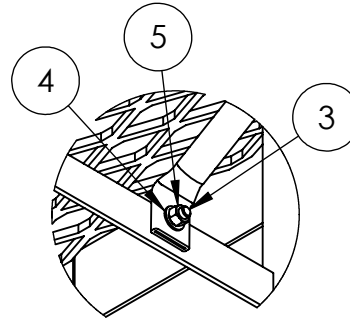

DETAIL B
SCALE 1 : 6

1. Drill out holes.
2. Attach both stands to the inside of table support bar. (See diagram above)
3. Attach the seats to the stands.
4. Attach the straight end of each brace to the table. (See diagram above)
5. Attach bent end of both braces to the cross bar of each stand. (See diagram above)

Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- 7/32" Allen Wrench
- Drill

Periodic check of bolts tightness recommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.